
WIRING DIAGRAM FOR SINGLE-SINGLE-HUM

Directions: Tie white & green wires together (Ground) and solder to volume pot. Take orange wires (hot) and connect to switch where noted by blue arrows.

Note: All Lead wires are on the same side as the high "E" lead

string.

250K pots recommended for better tone. **.022mfd** cap recommended

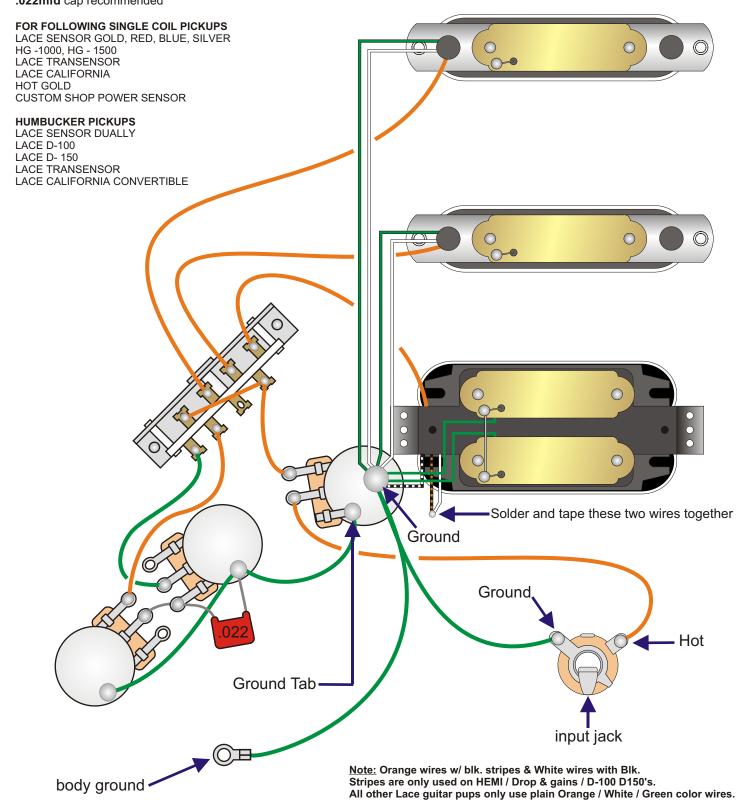

COPYRIGHT ACTODYNE GENERAL 2003